

## Spindle Lifting Lever and Cable Optional Accessories for Digimatic and Dial Indicators

### Spindle Lifting Lever (F type)

**21BZA205**\*1\*3

Use for F type SERIES 1 dial indicators.



**900527**: Lever  
**101171**: Screw

**902011**\*3

Use for F type SERIES 2 dial indicators  
(up to 10 mm/0.4 in range).



**900525**: Lever  
**101171**: Screw

**903424**\*1\*3

Use for F type SERIES 2 dial indicators (up to  
20 mm/0.8 in range) and SERIES 3 and 4 dial  
indicators (up to 10 mm/0.4 in range).



**903307**: Lever  
**192686**: Screw

### Spindle Lifting Lever (S type)

**902100**\*1

Use for S type SERIES 1 and F type SERIES 2 (up  
to 10 mm/0.4 in range) dial indicators.



**21AZB149**\*2

Use for S type SERIES 2, 3, and 4 dial indicators  
(up to 10 mm/0.4 in).



**21AZB150**\*2

Use for S type SERIES 2 and 3 dial indicators (from  
10 mm/0.4 in up to 20 mm/0.8 in).



### Spindle Lifting Lever (for ID-SS, ID-SX, ID-CX)

**21EZA198**\*1\*3



**21AZB149**: Lever  
**101171**: Screw

\*1 Before use, replace the stop screw with the standard accessory.

\*2 Use the stop screw already fixed to the dial indicator body.

\*3 Stop screw is for mm model.