

## Spindle Lifting Lever and Cable Optional Accessories for Digimatic and Dial Indicators

### Spindle Lifting Lever (A type)

**902100**\*1

Use for A type SERIES 1 dial indicators.



**21EZA198**\*2

Use for A type SERIES 2, 3, and 4 dial indicators (up to 10 mm/0.4 in).



**21AZB149**: Lever  
**101171**: Stop screw

**21AZB150**\*2

Use for A type SERIES 2 and 3 dial indicators (from 10 mm/0.4 in up to 20 mm/0.8 in).



### Spindle Lifting Lever (S type)

**902100**\*1

Use for S type SERIES 1 dial indicators.



**21AZB149**\*2

Use for S type SERIES 2, 3, and 4 dial indicators (up to 10 mm/0.4 in).



**21AZB150**\*2

Use for S type SERIES 2 and 3 dial indicators (from 10 mm/0.4 in up to 20 mm/0.8 in).



### Spindle Lifting Lever (for ID-SS, ID-SX, ID-CX)

**21EZA198**\*1\*3



**21AZB149**: Lever  
**101171**: Stop screw

\*1 Before use, replace the stop screw with the standard accessory.  
\*2 Use the stop screw already fixed to the dial indicator body.  
\*3 Stop screw is for mm model.