




# ABSOLUTE Digimatic Indicator ID-CNX SERIES 543 — Standard Type

- Supports bidirectional communication between the **ID-C** and the computer, enabling data output to a computer and setting of various functions of **ID-C** from a computer.
- The ABS (absolute) scale restores the last origin position\* automatically when the indicator is turned on, and realizes high reliability by eliminating over-speed errors.
- Tolerance judgment can be performed by setting upper and lower tolerance limits. The judgment result (GO/NO-GO) can be displayed in full-size characters.
- An analog bar indicator has been integrated to make upper/lower limit and turnover point reading more comfortable.
- Battery life of approx. 2.5 years under normal use has been achieved with only one battery.
- Equipped with a data output port that enables incorporation into measurement networking and statistical process control systems. (Refer to page A-3)

\* Refer to "Origin Setting of Digimatic Indicators" on page







readability of measurement values.



### Three large buttons

The ease of use has been greatly enhanced thanks to these three large buttons. The user can freely set any frequently used function to the buttons.



- Power switch
- Data output (when connected to an external device)
- Data hold (when no external device is connected)

witches between the ABS (preset) and INC (zeroset) measurement modes

Count direction switching, tolerance judgment setting, resolution switching, scale factor setting, and function lock setting

 inch/mm conversion (inch/mm type)

### 330° rotary display

The display can be rotated 330°, allowing use at a position where you can easily read the measurement value.



# Calibration schedule warning

An icon is displayed on the LCD to notify the user of the set calibration schedule. This function facilitates the proper precision management of the measuring instrument.



The calibration schedule warning icon starts blinking at a set time (e.g. 1 week before the calibration date) before the limit. If the limit is exceeded, the entire screen starts blinking to notify the user.

#### **Technical Data**

- Display: 7-digit LCD, sign, and analog bar
   Battery: CR2032 (1 pc.) for initial operational checks (standard accessory)
- Battery life: Approx. 2,700 hours of continuous use. Approx. 2.5 years under normal use.

Note: Depends on use of the indicator. The above values are reference values

• Maximum response speed: Unlimited (except for scanning measurement)

#### **Functions**

- Peak detection (MAX/MIN)
- Runout range measurement (MAX MIN)

- Zero-setting (INC system)
   Presetting (ABS system)
   Measuring direction switching
   Tolerance judgment

- Resolution switching
   (For 0.0005 mm or 0.00002 inch resolution type)
- Simple calculation: f(x) = Ax
- Function Lock
- Calibration schedule warning
   Auto power ON/OFF
- Data output
- Display value holding (when no external device is connected)
- 330° rotary display
- Low battery/voltage alarm displayError alarm display

#### **Optional Accessories**

• Lifting

**21EZA198** (12.7 mm/0.5 inch type) Lifting cable: **21JZA295** 

(stroke 12.7 mm: 12.7 mm/0.5 inch type)

Lifting knob:

21EZA105 (12.7 mm/0.5 inch type)\*1 21EZA197 (25.4 mm/1 inch type) 21EZA200 (50.8 mm/2 inch type)

Lifting lever: 21EAA426 (for measuring range: 25.4 and

50.8 mm) (supplied with 25.4 mm and 50.8 mm models as standard.)

\*1 Not available for low measuring force models.

Auxiliary spindle spring:
 02ACA571 (25.4 mm/1 inch type)\*2

02ACA773 (50.8 mm/2 inch type)\*2

\*2 Required when orienting the indicator upside down.
• SPC Cable:

06AGL011 (1 m) **06AGL021** (2 m)

- USB Input Tool Direct (2 m): 06AGQ001F
- Input Tool Series

IT-020U (USB Keyboard Signal Conversion Type):

264-020 IT-007R (RS-232C Communication Conversion Type): 264-007

- Connecting Cables for U-WAVE-T (160 mm): 02AZG011 For foot switch: 02AZG021
- Connecting unit for **U-WAVE-TM/TMB**:
- O2AZF700 (12.7 mm/0.5 inch type)
  Digimatic Mini-Processor DP-1VA LOGGER: 264-505
  Contact points for Mitutoyo's digimatic indicators (Refer to pages F-57 to F-60 for details.)
- Interchangeable backs for SERIES 2 models (Refer to page F-61 for details.)
- Measuring stands (Refer to pages F-84 to F-91 for details.)





## **Spindle orientation for measurement**

- Standard models with measuring range 12.7 mm: Usable in all orientations.
- Models with measuring range 25.4 or 50.8 mm: Usable between the contact point pointing downward and spindle in horizontal orientation. To use the contact point pointing upward, the auxiliary spindle spring (optional) is required.

  • Low measuring force model: See "Setting measuring
- force on low measuring force models" below.

### **Setting measuring force on low** measuring force models

The measuring force of models with low measuring force can be set by combining standard accessory springs and weights.
• 543-715(B)/716(B)/717(B)

Spindle orientation	Spring	Weight (approximately 0.1 N)	Maximum measuring force (N)		
	Yes	Yes	0.5 or less		
Pointing vertically	Yes	No	0.4 or less		
downward	No	Yes	0.3 or less		
	No	No	0.2 or less		
Horizontal	Yes	No	0.3 or less		

Note: Operation using configurations other than shown above is not guaranteed.

#### • 543-705(B)/706(B)/707(B)

Spindle orientation	Spring	Weight (approximately 0.1 N)	Maximum measuring force (N)		
	Yes	Yes	0.7 or less		
Pointing vertically downward	Yes	No	0.6 or less		
	No	Yes	0.4 or less		
	No	No	Not guaranteed		

Note: Operation using configurations other than shown above is not guaranteed

## **SPECIFICATIONS**


Metric						ISO/JIS	type AS	ME/ANSI	/AGD type
Order No.			Resolution	Maximum permissible error MPE*1 (mm)			Massuring force	Net mass (g)	
w/lug	Flat back	Range (mm)	(mm)	MPE <sub>E</sub> *3	Hysteresis MPE <sub>H</sub>	Repeatability MPE <sub>R</sub>	Measuring force MPL (N)	w/lug	Flat back
543-700	543-700B	12.7	0.0005/	.01	0.002	0.002	1.5 or less	175	165
<b>543-705</b> * <sup>2</sup>	543-705B*2	12.7	0.00037				0.4 to 0.7	170	160
_	543-720B	25.4	(selectable)				1.8 or less	_	195
_	543-730B	50.8		0.005			2.3 or less	_	260
543-710	543-710B	12.7	0.01	0.02	0.02	0.01	0.9 or less	170	160
<b>543-715*</b> <sup>2</sup>	543-715B*2						0.2 to 0.5	165	155
_	543-725B	25.4					1.8 or less	_	190
_	543-735B	50.8		0.04			2.3 or less	_	245

- \*1 These values apply at 20 °C. \*2 Low measuring force
- \*3 Error of indication for the total measuring range

Inch/Metri	c	ı							
Order No.				Maximum permissible error MPE*1				Net mass (g)	
w/lug	Flat back	Range	Resolution	MPEE*3	Hysteresis MPE <sub>H</sub>	Repeatability MPE <sub>R</sub>	Measuring force MPL (N)	w/lug	Flat back
543-701	543-701B		0.00002/				1.5 or less	175	165
543-702	543-702B	0.5 in/	0.00005/				1.5 or less	195	165
543-706* <sup>2</sup>	543-706B*2	12.7 mm	0.0001/	±0.00012 in			0.4 to 0.7	170	160
543-707* <sup>2</sup>	543-707B*2		0.0005 in	/0.003 mm	0.00008 in	0.00008 in	0.4 to 0.7	190	160
_	543-721B	1 in/	0.0005/		/0.002 mm	/0.002 mm	1.8 or less	_	195
_	543-722B	25.4 mm	0.001/				1.8 or less	_	195
_	543-731B	2 in/	0.01 mm	±0.0002 in			2.3 or less	-	260
_	543-732B	50.8 mm	(selectable)	/0.005 mm			2.3 or less	_	260
543-711	543-711B						0.9 or less	170	160
543-712	543-712B	0.5 in/					0.9 or less	190	160
<b>543-716*</b> <sup>2</sup>	543-716B*2	12.7 mm		±0.001 in			0.2 to 0.5	165	155
<b>543-717*</b> <sup>2</sup>	543-717B*2		0.0005 in/	/0.02 mm	0.001 in	0.0005 in	0.2 to 0.5	185	155
_	543-726B	1 in/	0.01 mm		/0.02 mm	/0.01 mm	1.8 or less		190
_	543-727B	25.4 mm					1.8 or less		190
_	543-736B	2 in/		±0.0015 in			2.3 or less	_	245
_	543-737B	50.8 mm		/0.04 mm			2.3 or less	_	245

- \*1 These values apply at 20 °C.
- \*2 Low measuring force
- \*3 Error of indication for the total measuring range

## **DIMENSIONS**

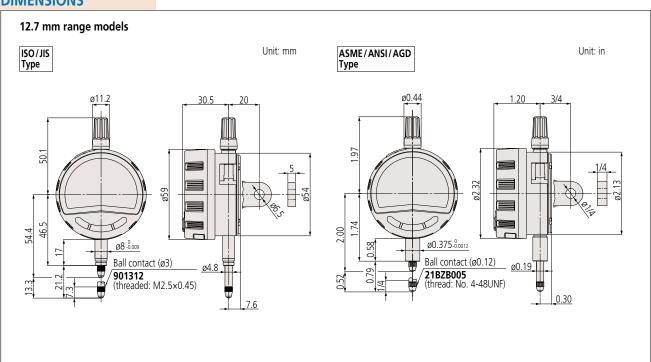

Note: Products with an Order No. suffixed "B" have a plain back, and other models have a center-lug back. Refer to page F-61 for details of the backs.

