

SERIES 2 — Special Dial Indicators

Adjustable hand dial indicator

• The hand position can be adjusted independently of the position of the spindle by rotating the top knob.

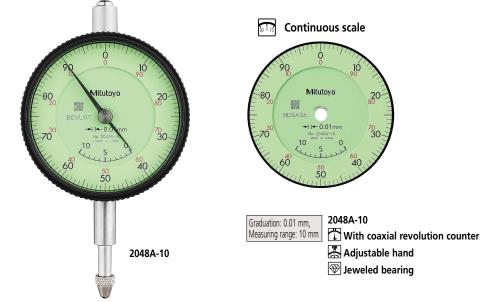

DIMENSIONS

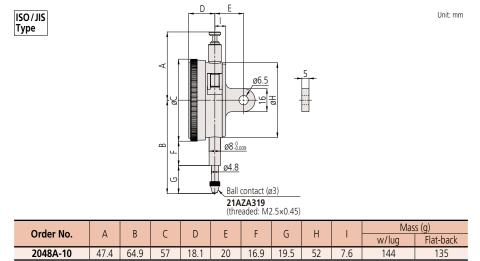

Note 1: Contact points, other than dedicated types, cannot be installed. Note 2: The shoulder on a contact point (standard accessory) acts as a stop to prevent spindle overrun that may otherwise damage the indicator. For this reason, if you need to install an optional contact point with an outside diameter smaller than 7 mm, use a washer (with outside diameter of at least 7 mm, inside diameter of 3 mm, and thickness of approx. 0.5 mm) placed between the contact point and the spindle.

SPECIFICATIONS Motric

	mether		1									
	Order No.		Craduation	Range	Maximum permissible error (MPE				MPE) (µm)	IPE) (µm)		Massuring
	w/lug	Flat-back	Graduation (mm)	(range/rev) (mm)	Indication error				Hvsteresis	Repeat-	Dial reading	Measuring force (N)
					1/10 Rev	1/2 Rev	1 Rev	Measuring range	TIYSLETESIS	ability	reading	
	2048A-10	2048AB-10	0.01	10 (1)	5	9	10	15	3	3	±0-100	1.4 or less

Note: Completed products inspection is performed in the vertical orientation (contact point downward) and the stated accuracy is guaranteed.

FEATURES Metric									
	Orde			6		R			
	w/lug	Flat-back	90 ⁰ 10		STOP				
	20484-10	2048AB-10	~	~		~	~		

Mitutoyo

Optional Accessories

• Bezel clamp: 21AZB148

• Limit hand (2 pcs.): 21AZB195