


Mitutoyo

Mitutoyo *Quality*

Contour and Surface Roughness Measuring Systems **FORMTRACER Avant Series**

FORM MEASUREMENT

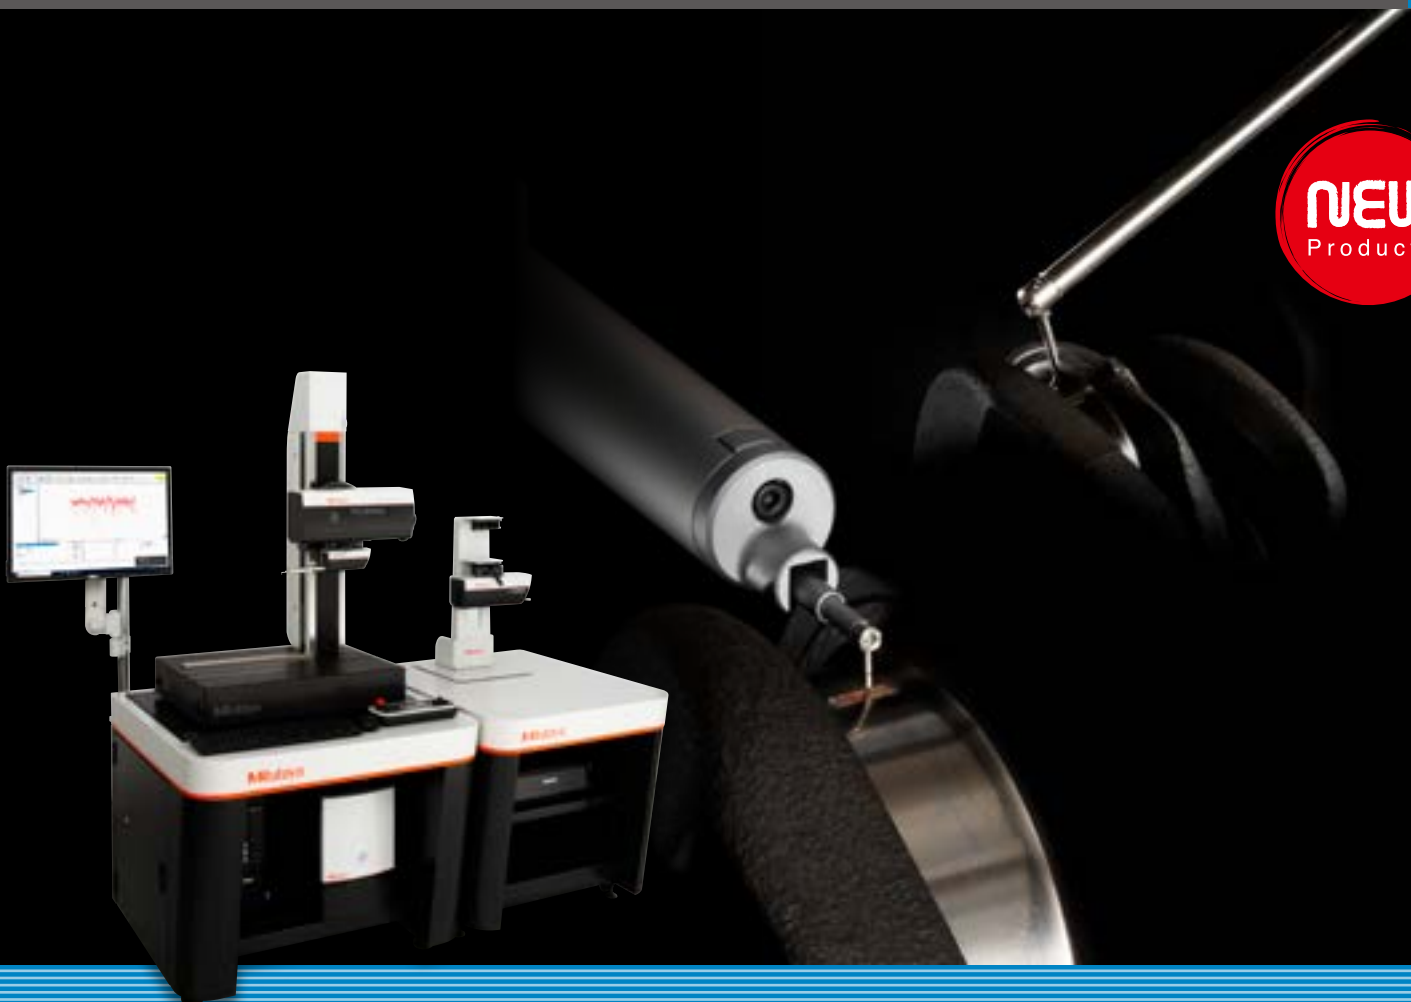

Go above and beyond.

FORMTRACER *Avant* SERIES

C o n t o u r a n d S u r f a c e R o u g h n e s s M e a s u r i n g S y s t e m s

Speed and operability like never before

A revolutionary measuring system that defies conventional thinking.

The hybrid measuring system "FORMTRACER Avant Series" allows measurements both of contour and surface roughness.

Endowed with "speed" enabling higher measurement efficiency, "operability" with automation and a wide variety of features, and "expandability" allowing upgrade to a complex system by integrating a detector, this revolutionary measuring system defies conventional thinking.

This is the
Real One.







CONTRACER



C o n t o u r

Continuous upper/lower surface measurement, combined with a measurement adjustable feature*, enables the continuous measurement of upper and lower surface contour, including the effective diameter of screw-threads.

The variable measuring force feature* eliminates the need to adjust the measuring force by switching weights or adjusting orientation. Mounting a contour detector also reduces workpiece handling and expands the Z1-axis (detector stroke) measurement range to greatly improve the efficiency of contour measurement.

* Only when mounting the contour detector C-4500

VARIATION



Contour detector
C-4500 (High accuracy)

Contour detector
C-3200 (General-purpose)



SURFTEST



Surface roughness

Compliant with JIS, ISO, ANSI, VDA, and other industrial surface roughness standards.

Rapid movement of the measuring unit, combined with optional accessories to automate leveling of the measuring surface during setup prior to measurement, shortens measurement time and reduces the burden placed on the operator.

VARIATION

OPTION

Roughness detector holder
S-3000CR
(Upward and downward + Crank)

Roughness detector holder
S-3000

OPTION

Roughness detector holder
S-3000MR
(Upward and downward)

OPTION

Roughness detector holder
S-3000C (Crank)



A feature-rich lineup covers every purpose.

This single machine can measure contours and surface roughness.

Just by integrating a detector with a base system comprising FTA-S4C3000/4000 (contour instrument) and FTA-S4S3000 (surface roughness tester), it is possible to upgrade a contour instrument or surface roughness tester to a complex system, from a general-purpose contour instrument to a high-precision contour instrument.

Three types of surface roughness detector holder can be added for a wider range of surface roughness measurements.

Other than the addition of detectors, Mitutoyo provides a choice of 100/200 mm-type drive units, high-column instruments, and large-sized base instruments, as standard.



Contour Instruments
FTA-S4C3000/4000

Surface Roughness Tester
FTA-S4S3000

Standard model

This is the standard model that constitutes the base for the surface roughness tester and contour instrument. As detectors for roughness and contour can be added to each instrument, a single machine can be used to perform various measurements for which multiple instruments used to be required.



200 mm drive unit, high-column model
Surface Roughness Tester
FTA-H8S3000

200 mm drive unit, large-sized base instrument
with long column model
Surface Roughness Tester
FTA-L8S3000

High-column model

The base instrument is the same size as the standard model, except the column is higher. The extra depth allows a wider range of measurements in the vertical direction.


Large-sized model

This is the large-sized model with the maximum-size base and column. It can efficiently measure heavy and/or long workpieces.

HIGH-SPEED


"Speed-up" greatly reduces measurement time

FORMTRACER Avant Series boast best-in-class drive speed, such as fast movement of drive unit and column, stroke (retraction) speed-up, etc. To meet the needs of "Speed-up," on surface roughness measurement, the positioning distance from the start of measurement to the start of data acquisition is reduced to the limit, while on contour measurement, the time from touch-down on a workpiece to the start of measurement is shortened. The total measurement time is drastically reduced to improve measurement efficiency.

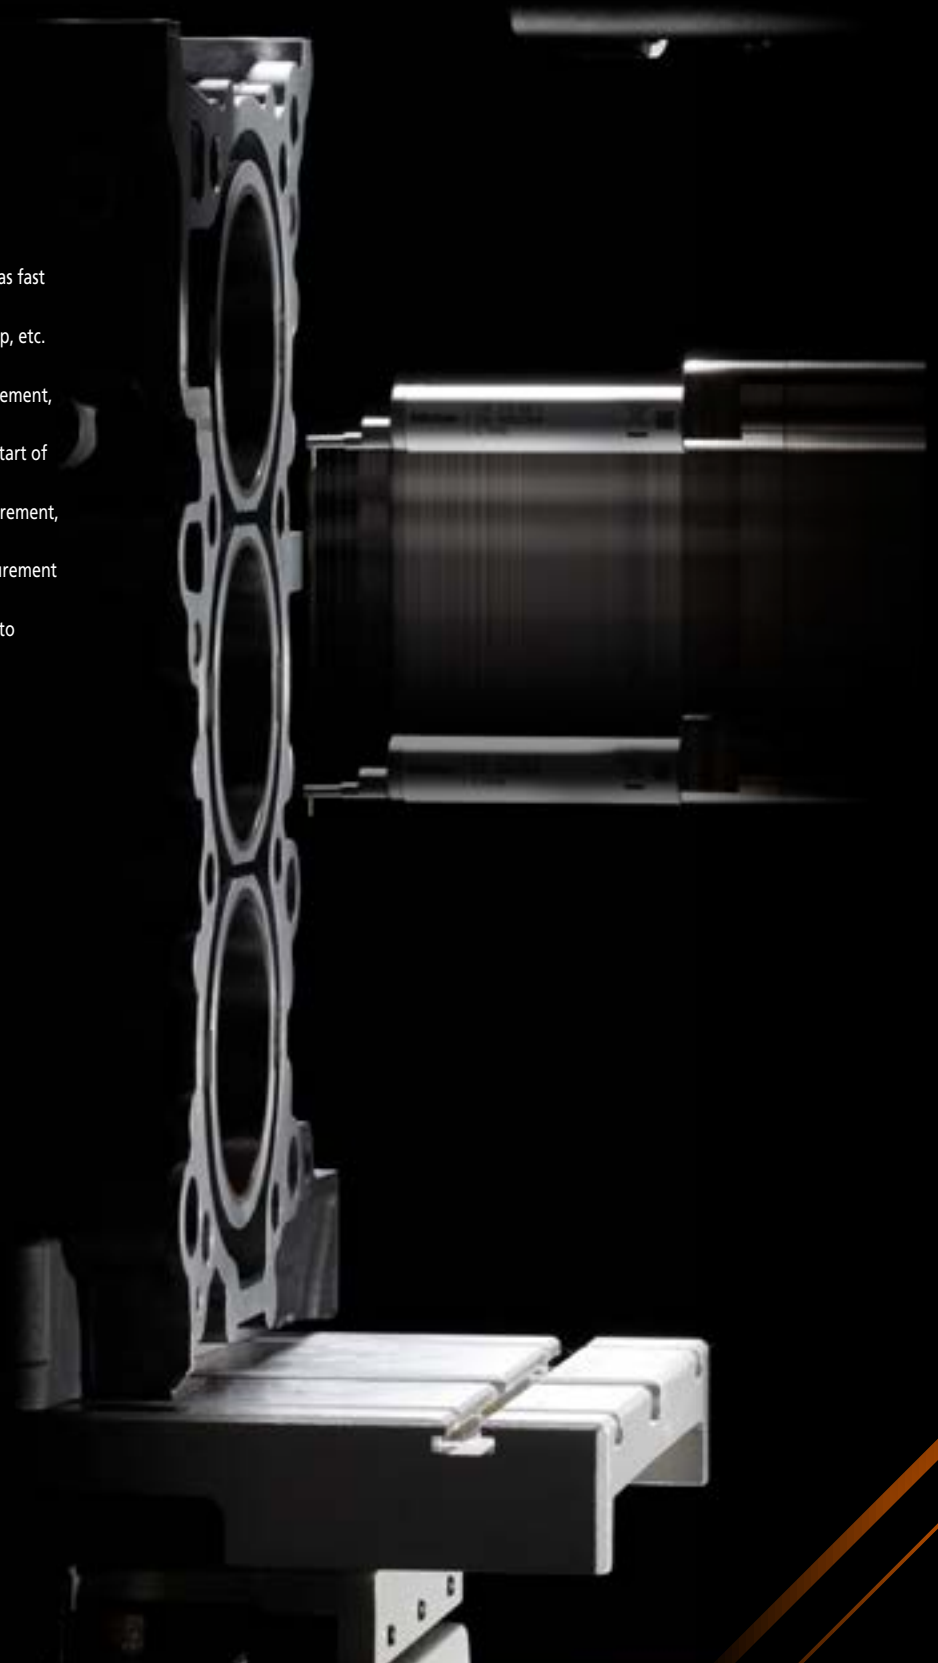


Best-in-class high-speed driving

High-speed driving drastically reduces the measurement time

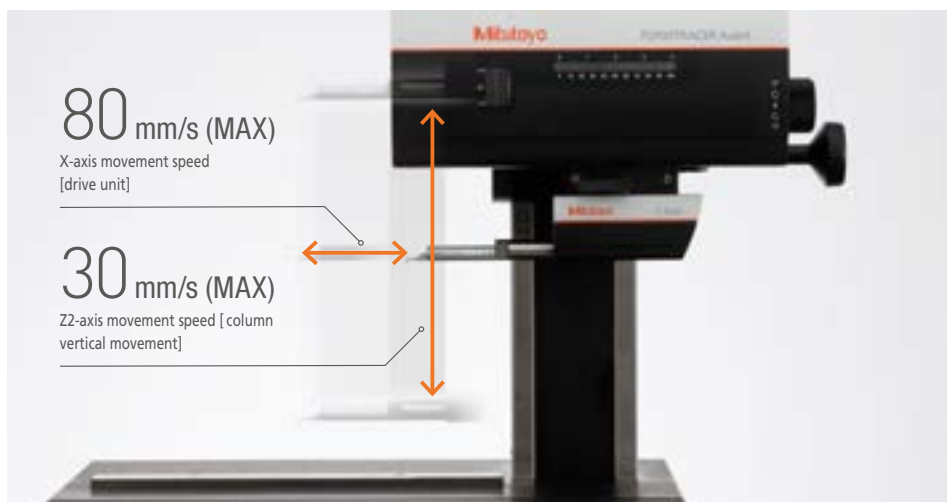

X-axis (drive unit): 80 mm/s (MAX) Z2-axis (column vertical movement): 30 mm/s (MAX)
Speed-up of the movement enables reduction of the total measurement time.

Reduction of the total measurement time

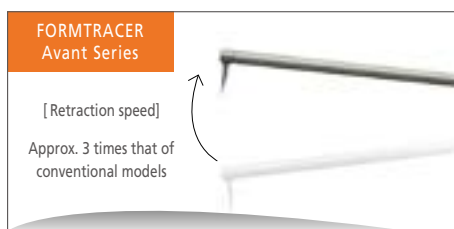

The stroke (retraction) speed is improved by approx. three times compared to conventional models; meanwhile, the speed when the stylus goes down to touch a workpiece becomes slower in consideration of safety. The measuring system automatically detects the workpiece contact, then immediately moves into standby mode for the start of measurement approximately three times faster than a conventional model, for a drastic improvement in measuring efficiency.


**Real One
POINT**

Cutting down the positioning distance to its limit

Industry's
No.1



The positioning distance from the start of measurement to the start of measurement data acquisition is reduced to the absolute minimum of 0.05 mm. The system vigorously supports the measurement of edges and narrow parts where it is difficult to secure sufficient measurement distance.

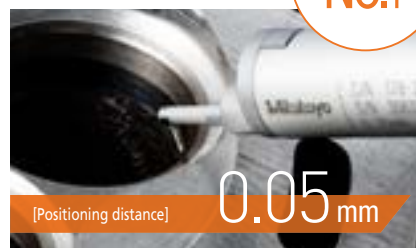

WORKABILITY




Remarkably improved workability with outstanding features

This system uses a cable-less design allowing measurements without having to worry about snagging unprotected detector cables, while the drive section is an X-axis inclinable drive unit. The inclination range is a wide $\pm 45^\circ$, allowing inclined surfaces on of workpieces to be simply measured without using an inclination jig. In addition, the detector can be replaced without turning power off, the guide pin reproduces positioning with high accuracy, and the software supporting the mounted detector starts up automatically. Such outstanding features drastically improve work efficiency.

X-axis inclinable drive unit



To measure inclined surfaces efficiently, an X-axis inclinable drive unit which can measure surfaces within a range of $\pm 45^\circ$ is mounted. When mounting the contour detector C-4500, the measuring force can be varied in 5 steps by using the software provided (FORMTRACEPAK), eliminating the need to adjust the measuring force by switching weights or through positional adjustment. This system can also maintain the specified measuring force even when inclined.

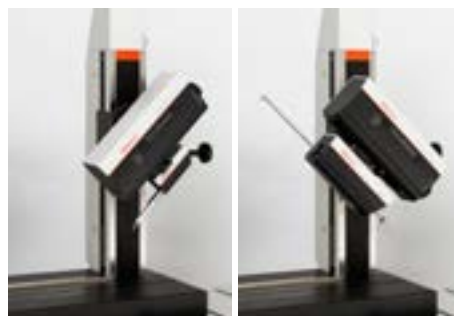

[X-axis drive unit inclination range]

$\pm 45^\circ$

Arc scale



The system features a built-in precision arc scale that allows the circular trajectory of the stylus tip to be read directly, eliminating the need for an arc direct conversion mechanism, which often causes measurement error on the detector. It allows precision measurement over a wide range even if the arm is not in the horizontal attitude. You can perform precision measurement without worrying about the measurement range.



Cable-less

All detector and drive unit cables are housed inside the main unit to eliminate any risk of abrasion or snagging and guarantee precision measurement and rapid movement.



Hot swapping



No need to turn the controller power off when replacing the contour detector or roughness detector; moreover, the tool-less replacement mechanism (thumb-turn clamber) greatly helps to reduce the replacement time by approx. 1/4 (approx. 30 seconds) compared to a conventional model. Further, positioning using the guide pin improves reproductivity when replacing detectors and allows efficient operation of the automatic measuring program.



WORKABILITY

Optimized measurement features depending on characteristics of workpieces


The upper/lower surface continuous measurement feature, performing control of measurement direction and measuring force by double-sided stylus and software, remarkably improves the measurement range. The stylus-drop detection feature immediately stops operation if the stylus suddenly drops, thus preventing damage to the stylus during continuous cut-out measurement without having to rely on a conventional mechanical stop. Other features enable accurate and safe measurements in accordance with the characteristics of a workpiece.



Upper/lower surface continuous measurement



Upper/lower surfaces can be measured continuously by using Mitutoyo's double-sided conical stylus. This continuous measurement data can be used to facilitate analysis of features that were difficult to measure before, such as the effective diameter of an internal screw-thread. The collision monitoring feature for the magnet arm and the detector cover ensures safe measurement even during high-speed movement, in addition, optional accessories for automatic measurement automate processes from the setup to the measurement.

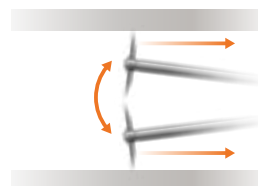


Stylus drop detection feature



Detects sudden drop of the stylus from a measurement surface and stops the measurement operation; also, it controls the dropping rate to avoid breakage of stylus.


Note: When mounting contour detector C-4500

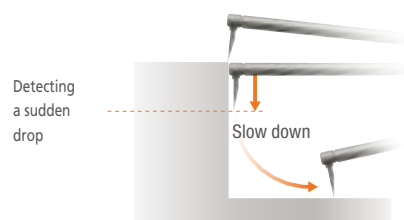

Continuous cut-out measurement feature



The detector hold position can be registered, allowing measurement to be performed without dropping below the preset position. This feature allows continuous measurement of interrupted surface features on workpieces without needing to use mechanical stoppers.

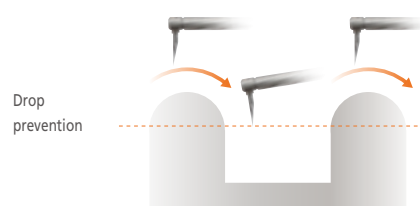


SOFTWARE

Backup for the unified management and sharing of measurement data, and visualization of quality

FORMTRACEPAK is equipped with a wide variety of features, such as control of the contour and surface roughness measuring systems, data analysis and comparison, and report creation. etc. MCubeMap visualizes the analysis data in detail by using various graphical technologies.


MeasurLink integrates measured data to a server via a networking system. Mitutoyo supports the realization of quality improvement by preventing defective products being produced, utilizing unified management and sharing of information.

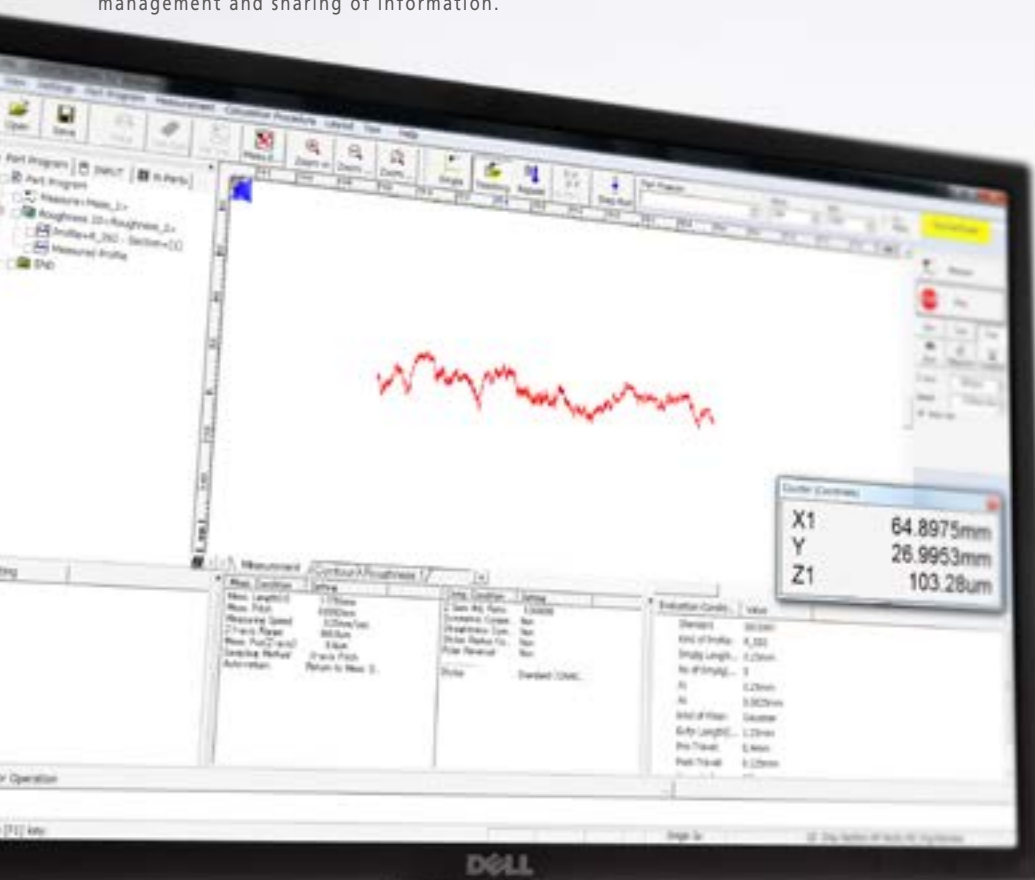


FORMTRACEPAK

<Surface property analysis program>

FORMTRACEPAK features offer total support for controlling the measuring system, surface roughness analysis, contour analysis, contour tolerancing, and inspection report creation.

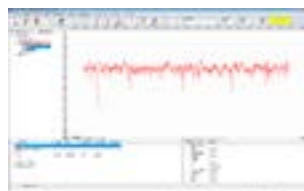

Surface roughness analysis

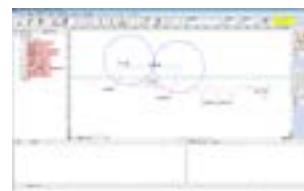


Contour analysis

MCubeMap

<3D surface property analyzing software>

Parameter analysis is available for not only the vertical directions of S_a and S_q , but also spaces, compounds, and features. A wide variety of graphical technologies help visualize the analyzed data in detail.

Note: The Y-axis table for 3D measurement is required separately.

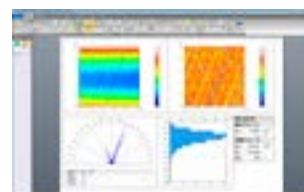


An example of 3D analysis

MeasurLink

<Measurement Data Network System>

MeasurLink networks each measuring system and aggregates the measurement data in a server. The real-time aggregation enables "Visible quality" meaning the unified management and sharing of information relevant to quality.

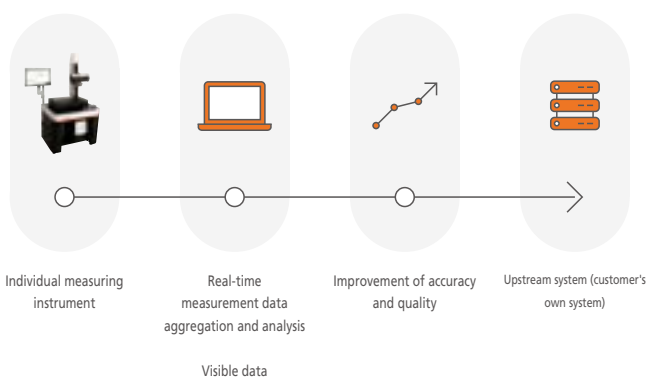

DESIGN

Coexistence of form and functional beauty with no compromise on detail

Visual beauty, functional rationality, and reliable measurement accuracy. We seek product design endowed with all of these. Coexistence of beauty of form in pursuit of design with no compromise on detail, and functional beauty providing both operability and innovation. In addition to coloring, the new design adds improvements and ingenious features that considers the whole product structure and enables ease of use.



- 1 In addition to coloring, the new design considers both usability and innovation. While inheriting the contracer and surftest tradition, one also senses a leading innovative spirit.
- 2 Applying an angle to the front surface of the vibration isolator and side table helps reduce stress on users who work while standing and provides excellent usability.
- 3 Improved operability thanks to added new features, such as the override control for adjusting the driving speed in real-time, and part program key that assists creation of part programs.
- 4 All detector and drive unit cables are housed inside the main unit to eliminate any risk of abrasion and guarantee precision measurement and rapid movement.



2

3



4




OPTIONS

Optional accessories for automatic measurement

Mitutoyo offers a wide variety of optional accessories supporting the major reduction of total measurement time, from setup and measurement to evaluation, by enabling quicker implementation of operations, such as measurement of multiple points, alignment of cylindrical workpieces and leveling for surface roughness measurement.



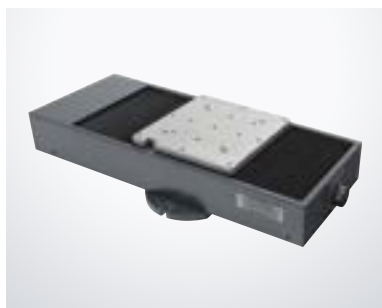


Y-axis table 178-097

Enables efficient, automatic measurement of multiple aligned workpieces and multiple points on a single surface.



Travel range: 200 mm
Resolution: 0.05 μ m
Positioning accuracy: $\pm 3 \mu$ m
Drive speed: Max 80 mm/s
Maximum load: 50 kg
Mass: 28 kg

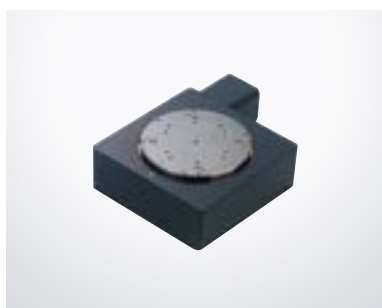

Rotary table 1-axis table 12AAD975

For efficient measurement in the axial/transverse directions. When measuring a cylindrical workpiece, automatic alignment can be performed in combination with the Y-axis table.

(* 1-axis mounting plate
 <Option: 12AAE630> is required when directly installing on the base of the FORMTRACER Avant.)

Displacement: 360°
Resolution: 0.004°
Maximum load: 12 kg
Rotational speed:
 Max 10°/s
Mass: 7 kg



Rotary table 2-axis unit 178-078

You can measure multiple points on a cylindrical workpiece and automate front/rear-side measurement.

(* 2-axis mounting plate
 <Option: 12AAE718> is required when directly installing on the base of the FORMTRACER Avant.)

Displacement: 360°
Resolution: 0.0072°
Maximum load
 (loading moment):
 4 kg (moment 343 N-cm or less)
Rotational speed:
 Max 18°/s
Mass: 5 kg



Auto leveling table 178-087

This table performs fully automatic leveling adjustment roughness measurement surfaces at the start of measurement. Full automation ensures rapid measurement regardless of the skill level of the operator.

Inclination adjustment angle: $\pm 2^\circ$
Maximum load: 7 kg
Table dimensions: 130x100 mm
Mass: 3.5 kg



Drive unit DAT unit 178-050

This optional unit supports leveling of measurement surfaces by inclining the drive unit. This makes leveling easy when working with large workpieces that are hard to place on the auto leveling table.


Inclination range: $\pm 1.5^\circ$
Mass: 6.7 kg



3-axis adjustment table 178-047



This table helps make the adjustments required when measuring cylindrical surfaces. The corrections for the pitch angle and the swivel angle are determined from a preliminary measurement and the Digimatic micrometers are adjusted accordingly. A flat-surfaced workpiece can also be leveled with this table. By using Mitutoyo's 3-axis adjustment table, the workpiece can be aligned and leveled easily, simply by following the FORMTRACEPAK guidance. No experience or special expertise is required.

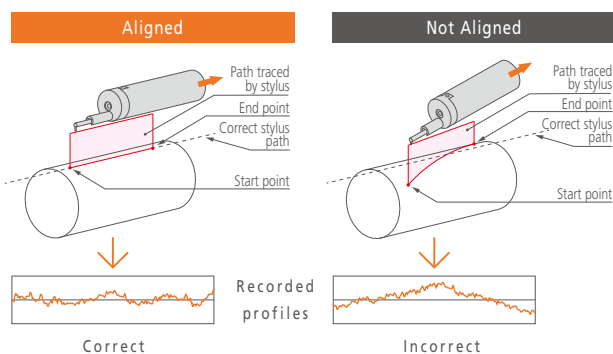

Centering chuck (ring operated) 211-032



This chuck is useful when measuring small workpieces. You can easily clamp them with its knurled ring.

Holding range:
 Inner jaws OD: 1 - 36 mm
 Inner jaws ID: 16 - 69 mm
 Outer jaws OD: 25 - 79 mm
Dimensions (D×H):
 118×41 mm
Mass: 1.2 kg

Micro-chuck 211-031



This chuck is suitable for clamping extra-small diameter workpieces (1 mm or less), which cannot be retained with the centering chuck.

Holding range:
 OD: 0.2 - 1.5 mm
Dimensions (D×H):
 107×48.5 mm
Mass: 0.6 kg


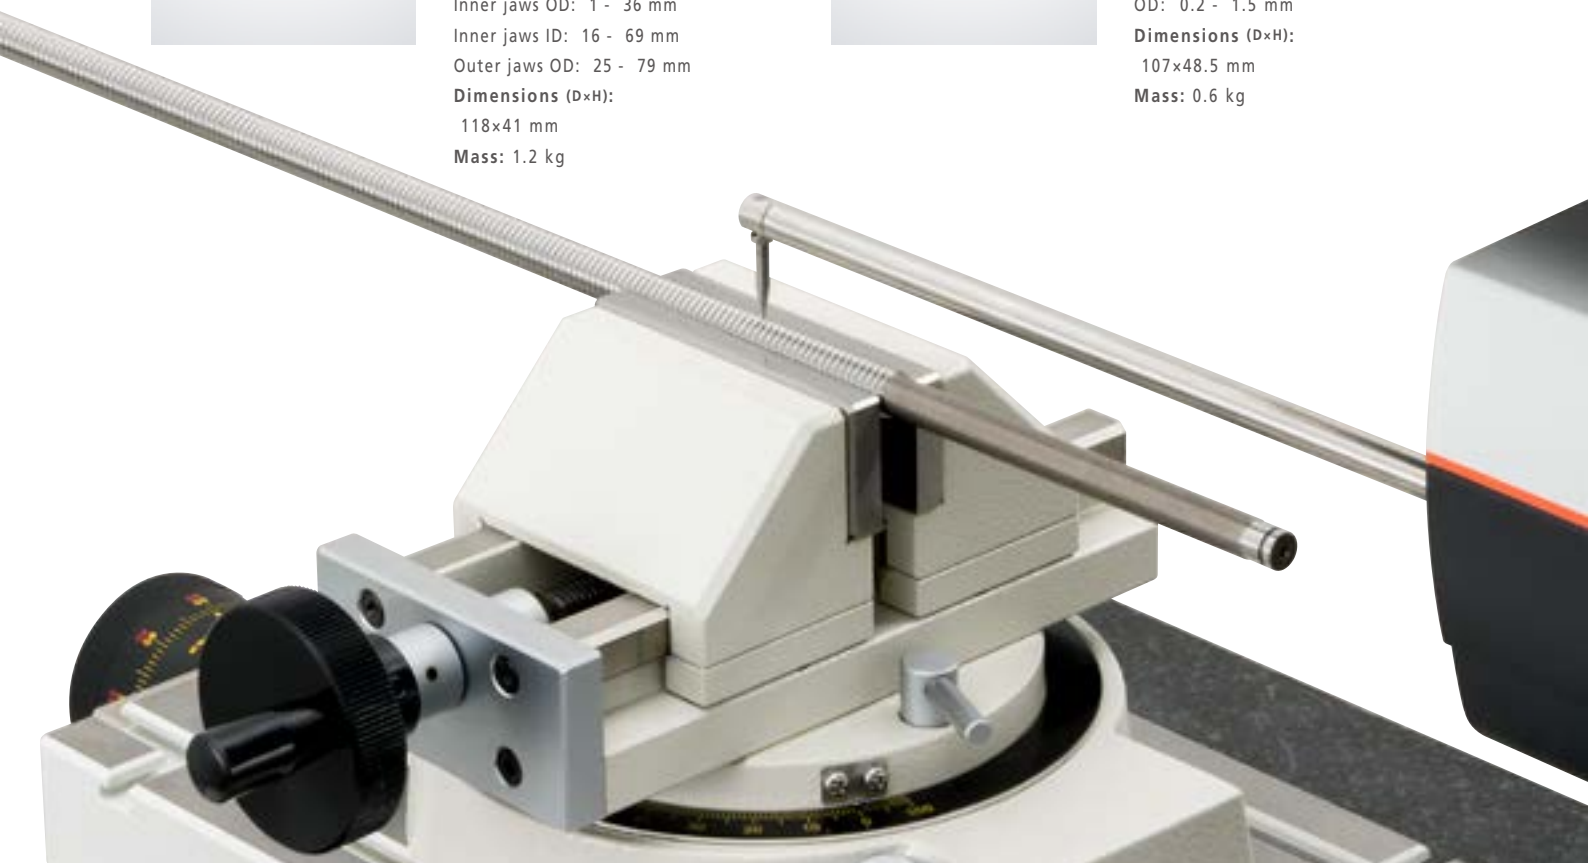


Table and fixture systems



Desktop type vibration isolators

Manually charged pneumatic type*3
178-023

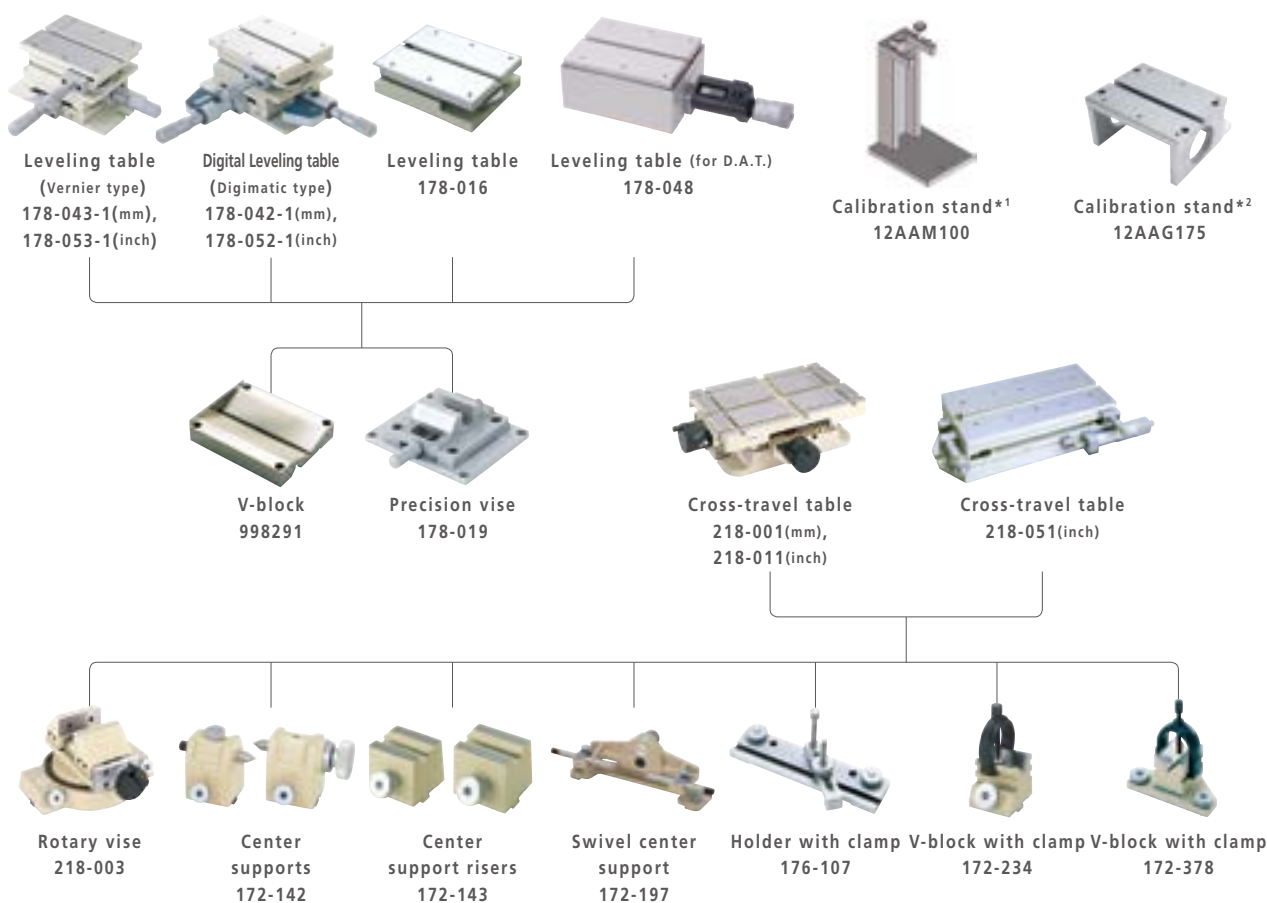

Automatically charged pneumatic type*3
178-025




Automatically charged pneumatic type*4
178-115



Stand for desktop type

Stand for Desktop type for
178-023 and
178-025.

External size (W×D×H):
640×470×660 mm
Mass: 25 kg
178-024

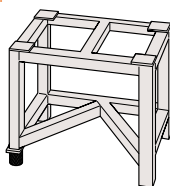

Measurement workbench
(for standard base)

12AAQ587
External size (W×D×H): 900×750×740 mm
Maximum loading: 300 kg

Measurement workbench
(for wide base)
12AAQ583

Stand for Desktop type for 178-115.

External size (W×D×H): 1500×900×740 mm
Maximum loading: 800 kg

Desk type vibration isolators

Desk type*3
(Stand integrated type, air system)
178-188

Side table*5
178-181



Desk
(178-188)

Side table

Example combination: with side table
but no monitor arm (tester and PC not
included)

Desk type*4
(Stand integrated type, air system)
178-189

Monitor arm*5
12AAK120



Monitor
arm

Desk
(178-189)

Example combination: with monitor
arm but no side table*6 (tester and PC
not included)

*1 Required for calibrating upward measurement of FTA-**C3000/**D3000 series. (Contour measurement)

*2 Required for calibrating in bulk by mounting straight arm / small-hole stylus arm without using cross-travel table and Y-axis table. (Contour measurement)

*3 For models with a product code that ends in S4, S8, H4, or H8.

*4 For models with a product code that ends in W4, W8, L4 or L8 (wide base models).


*5 Used together with desk types (178-188 or 178-189).

*6 User to provide a printer rack.




Stylus name	Stylus No.	Order No.	Application arm No.	H (mm)
Double-sided conical stylus*1	SPHW-56	12AAM095*2	AB-31, AB-37	20
	SPHW-66	12AAM096	AB-31, AB-37	32
	SPHW-76	12AAM097	AB-31, AB-37	48
One-sided cut stylus	SPH-51	354882	AB-31, AB-37	6
	SPH-61	354883	AB-31, AB-37	12
	SPH-71	354884*2 *3	AB-31, AB-37	20
	SPH-81	354885	AB-31, AB-37	30
	SPH-91	354886	AB-31, AB-37	42
	SPH-92	354891	AB-31, AB-37	42
Intersecting cut stylus	SPH-52	354887	AB-31, AB-37	6
	SPH-62	354888	AB-31, AB-37	12
	SPH-72	354889	AB-31, AB-37	20
	SPH-82	354890	AB-31, AB-37	30
	SPH-92	354891	AB-31, AB-37	42
Cone stylus Tip angle 30° Sapphire tipped	SPH-53	354892	AB-31, AB-37	6
	SPH-63	354893	AB-31, AB-37	12
	SPH-73	354894	AB-31, AB-37	20
	SPH-83	354895	AB-31, AB-37	30
	SPH-93	354896	AB-31, AB-37	42
Cone stylus Tip angle 30° Carbide-tipped	SPH-56	12AAA566	AB-31, AB-37	6
	SPH-66	12AAA567	AB-31, AB-37	12
	SPH-76	12AAA568	AB-31, AB-37	20
	SPH-86	12AAA569	AB-31, AB-37	30
	SPH-96	12AAA570	AB-31, AB-37	42
Cone stylus Tip angle 20° Carbide-tipped	SPH-57	12AAE865	AB-31, AB-37	6
	SPH-67	12AAE866	AB-31, AB-37	12
	SPH-77	12AAE867	AB-31, AB-37	20
	SPH-87	12AAE868	AB-31, AB-37	30
	SPH-97	12AAE869	AB-31, AB-37	42
Cone stylus Tip angle 50° Diamond tipped	SPH-79	355129	AB-31, AB-37	20
Knife edge stylus	SPH-54	354897	AB-31, AB-37	6
	SPH-64	354898	AB-31, AB-37	12
	SPH-74	354899	AB-31, AB-37	20
	SPH-84	354900	AB-31, AB-37	30
	SPH-94	354901	AB-31, AB-37	42
Ball stylus	SPH-55	354902	AB-31, AB-37	6
	SPH-65	354903	AB-31, AB-37	12
	SPH-75	354904	AB-31, AB-37	20
	SPH-85	354905	AB-31, AB-37	30
	SPH-95	354906	AB-31, AB-37	42
Small hole stylus	SPH-41	12AAM104	AB-33	2
	SPH-42	12AAM105	AB-33	4
	SPH-43	12AAM106	AB-33	6.5


Double-sided conical stylus

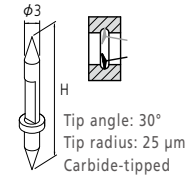



One-sided cut stylus

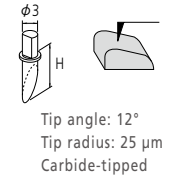


Intersecting cut stylus

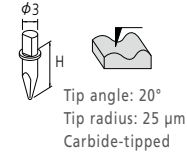


Cone stylus

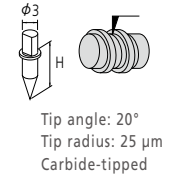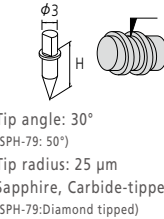


Knife edge stylus

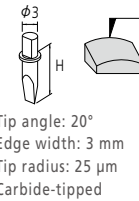


Ball stylus

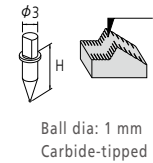


Small hole stylus SPH-41

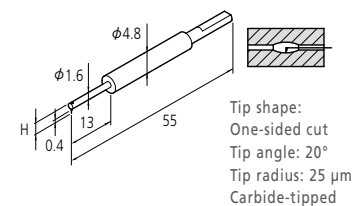

Small hole stylus SPH-42

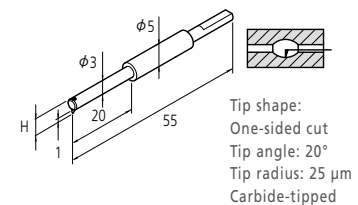

Small hole stylus SPH-43

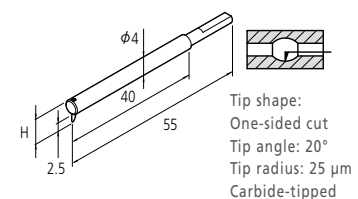




For contour measurement Arms


Arm name	Arm No.	Parts No.	Applicable stylus No.
Straight arm	AB-31*4	12AAM101	SPH-5*, 6*, 7*, 8*, 9* SPHW*5 - 56, 66, 76
Eccentric arm	AB-37	12AAQ762	SPH-5*, 6*, 7*, 8*, 9* SPHW*5 - 56, 66, 76
Small-hole arm	AB-33	12AAM103	SPH-41, 42, 43

unit: mm


| Straight arm AB-31

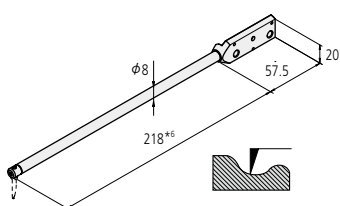

| Eccentric arm AB-37

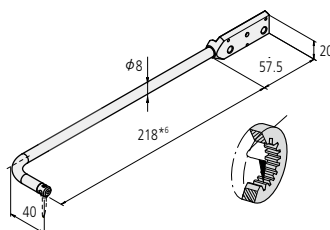

| Small-hole arm AB-33

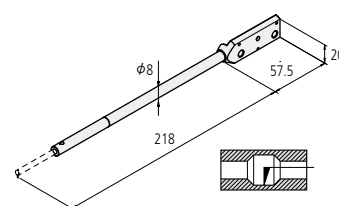


For contour measurement Arm stylus (comprising an arm and stylus)


Arm stylus name	Stylus No.	Parts No.	H (mm)
Double-sided small hole arm stylus*7	SPHW-21	12AAT469	2.4
	SPHW-22	12AAT470	5
	SPHW-31	12AAM108	2.4
	SPHW-32	12AAM109	5
	SPHW-33	12AAM110	9

unit: mm


| Double-sided small hole arm stylus SPHW-21/31

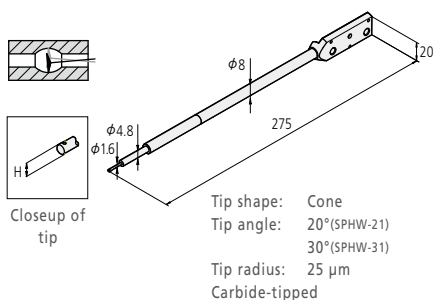

| Double-sided small hole arm stylus SPHW-22/32

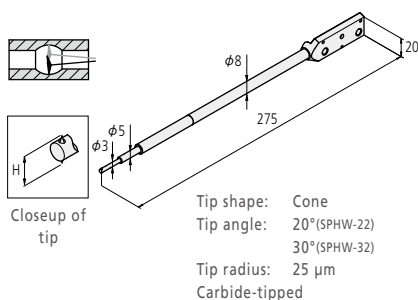


| Double-sided small hole arm stylus SPHW-33

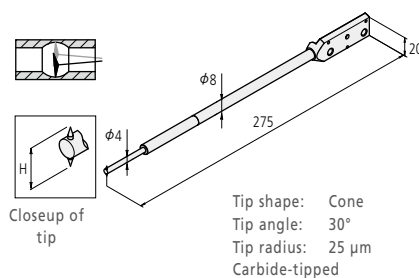

*1 Stylus for contour detector C-4500. *2 Standard accessory of FTA-**C4000/D4000 series. *3 Standard accessory of FTA-**C3000/D3000 series.

*4 Standard accessory of FTA-**C3000/C4000/D3000/D4000 series. *5 Stylus for FTA-**C4000/D4000 series. *6 One-sided cut stylus SPH-71 (standard accessory) mounting.

*7 Arm Stylus for FTA-**C4000/D4000 series.

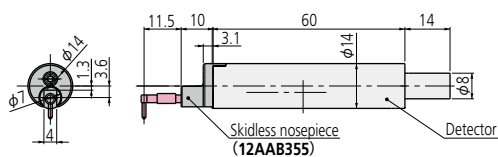

Order No.	Measuring force	
178-396-2	0.75 mN	Detectors that comply with ISO 4278
178-397-2	4 mN	Detectors that comply with previous standards, for general use.



For Surface Roughness Measuring Extension rods

Extension rod 50	12AAG202	Extension length 50 mm
------------------	----------	------------------------



Extension rod 100	12AAG203	Extension length 100 mm
-------------------	----------	-------------------------





Note: No more than one extension rod can be connected.



For Surface Roughness Measuring Styli


unit: mm

Standard stylus

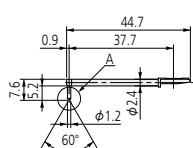


12AAE882 (1 μm)
12AAE924 (1 μm)*1
12AAC731 (2 μm)
12AAB403 (5 μm)*1
12AAB415 (10 μm)*1
12AAE883 (250 μm)*4
(): Tip radius

Double-length for deep hole*2




12AAE898 (2 μm)
12AAE914 (5 μm)*1
(): Tip radius

For small hole

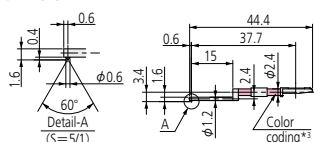


12AAC732 (2 μm)
12AAB404 (5 μm)*1
12AAB416 (10 μm)*1
(): Tip radius

For small hole/Double-length for deep hole*2

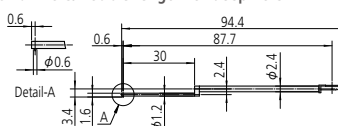


12AAE892 (2 μm)
12AAE908 (5 μm)*1
(): Tip radius

For extra-small hole

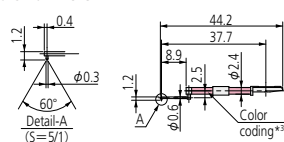


12AAC733 (2 μm)
12AAB405 (5 μm)*1
12AAB417 (10 μm)*1
(): Tip radius

For small hole*2 *4




12AAE884 (ø.6 mm)

For extra-minute hole

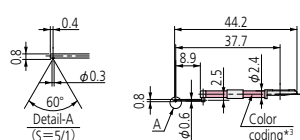

12AAC734 (2 μm)
12AAB406 (5 μm)*1
12AAB418 (10 μm)*1
(): Tip radius

For ultra-small hole*4

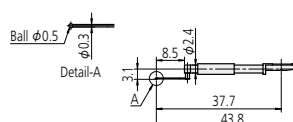

12AAJ662 (0.5 mm)

3X stylus
12AAC741 (2 μm)
12AAB414 (5 μm)*1
12AAB426 (10 μm)*1
(): Tip radius

12AAE893 (2 μm)
12AAE909 (5 μm)*1
(): Tip radius

Technical drawing of a shaft-hub assembly. The main view shows a shaft with a diameter of $\phi 1.2$ and a 60° taper. The shaft is inserted into a hub with a bore diameter of $\phi 2.4$. The shaft has a shoulder with a height of 14.2 and a width of 0.9. The hub has a bore length of 44.7 and a shoulder width of 37.7. A detail view 'Detail-A' shows a cross-section of the shaft with a 'Color coding' feature.

12AAC736 (2 μm)
12AAB408 (5 μm)*1
12AAB420 (10 μm)*1
(): Tip radius

Technical drawing of a shaft with dimensions:

- Outer diameter: 23 mm
- Shoulder diameter: 21.8 mm
- Thread diameter: 21.8 mm
- Thread pitch: 1.2 mm
- Thread type: deep groove
- Total length: 95.2 mm
- Threaded section length: 87.7 mm

12AAE893 (2 μm)
12AAE909 (5 μm)*1
(): Tip radius

groove*2

Color coding*3

Detail-A

44.7

37.7

24.2

23

60°

φ2.4

φ1.2

A

12AAC736 (2 μm)
12AAB408 (5 μm)*1
12AAB420 (10 μm)*1
(): Tip radius

12AAE895 (2 μm)
12AAE911 (5 μm)*1
(): Tip radius

ep groove*2

n)

Detail-A

Color coding*3

33

31.8

5.2

2.4

60°

1.2

37.7

45.2

12AAC737 (2 μm)
12AAB407 (5 μm)*1
12AAB419 (10 μm)*1
(): Tip radius

deep groove (30 mm) / Double-length for deep
*2

36.5
3.5
1.52
93.8
87.7
0.3
1.2

12AAE894 (2 μm)
12AAE910 (5 μm)*1
(): Tip radius

Technical drawing of a detail of a 30° cone. The drawing includes a detail view of a color coding mark labeled "Color coding*3" and "Detail-A". The main view shows a 30° cone with a 60° angle, a diameter of $\phi 1.2$, and a height of 7.6. The overall dimensions are 43.8 and 37.7. The drawing is labeled "Fig. 10-10" and "Fig. 10-11".

12AAB339 (2 μm)
12AAB410 (5 μm)
12AAB422 (10 μm)
(): Tip radius

12AAE896 (2 μm)
12AAE912 (5 μm)
(): Tip radius

Technical drawing of a ball joint assembly. The drawing shows a cross-section of the assembly with the following dimensions:

- Overall length: 44.7
- Distance from the left end to the center of the ball: 37.7
- Distance from the left end to the first step: 0.9
- Distance from the left end to the second step: 7.6
- Distance from the left end to the third step: 5.2
- Ball diameter: $\phi 1.588$
- Inner shaft diameter: $\phi 1.2$
- Outer housing diameter: $\phi 2.4$

12AAB338 (0.588)

Technical drawing of a shaft with dimensions. The shaft has a total length of 94.7. A section of length 87.7 is shown with a diameter of 2.4. A section of length 0.9 is shown with a diameter of 1.2. The shaft is supported by bearings. The drawing is labeled with dimensions 6, 4, 2, 0.9, 94.7, 87.7, 1.2, and 2.4.

12AAE886 (250 μ m)

12AAC738 (2 μm)
12AAB411 (5 μm)*1
12AAB423 (10 μm)*1
(): Tip radius

Technical drawing of a mechanical part showing dimensions and features. The part has a total length of 93.8 and a distance of 87.7 from the left end to the start of the last hole. The left end features a 60° angle and a hole with a diameter of $\phi 1.2$. The right end features a hole with a diameter of $\phi 2.4$. The part is 7.6 units high at the left end and 6.4 units high at the right end. The drawing is labeled 'p hole*2'.

12AAM601 (2 μm)
12AAM603 (5 μm)
(): Tip radius

Technical drawing of a mechanical part. The drawing includes a side view on the left and a top view on the right. The side view shows a cylindrical part with a diameter of $\phi 2.4$ and a length of 10. The top view shows a cylindrical part with a diameter of $\phi 1.2$ and a length of 45.2. The top view also shows a 60° angle and a dimension of 37.7. A label 'Color coding*3' points to a specific feature on the side view. A label 'Detail-A' points to a specific feature on the top view.

12AAC739 (2 μm)
12AAB412 (5 μm)*1
12AAB424 (10 μm)*1
(): Tip radius

[illegible]

12AAE899 (2 μm)
12AAE915 (5 μm)*1
(): Tip radius

*3

Tip radius	1 μm	2 μm	5 μm	10 μm	250 μm
Color coding	White	Black	No color	Yellow	No notch or color

*Customized special interchangeable styli are available on request. Please contact any Mitutoyo office for more information.

APPLICATION

Efficient precision measurement for practically any workpiece

FORMTRACER Avant Series has applications supporting measurements for a wide variety of workpieces. For example, a part-program (automatic measuring program) creation support key equipped with the remote BOX allows rapid creation of programs, and the contour sensor allows immediate measurement by creating a measurement-ready state once the sensor contacts a workpiece. Further, this series features stylus-up speed three times faster than conventional models, and each axis movement speed is fast, too. By combining these elements into a single system, efficient and accurate measurements are realized.

PET bottle Preform measurement



The thread of a familiar PET bottle requires precision measurement, since leaks will occur if it is too loose, or the cap cannot be tightened if it is too tight. The "sectional form of thread" of such PET bottles can be measured without cutting the product by using a cone stylus. Angle and pitch can be measured efficiently.

Screw gauge Ring measurement



Upper/lower surface continuous measurement and measurement adjustable feature on the C-4500 detector allows simultaneous measurements of the effective diameter of screw or ring gages, together with thread angle and pitch. Since a part-program (automatic measuring program) for measuring and analysis can be created, effective diameter, which requires high accuracy in micrometer threads, can be accurately and efficiently measured.

Golf club face Groove form measurement



Groove pitches, groove intervals, and edge shapes are strictly determined by golf club standards. By using the part-program (automatic measuring program) as a standard feature and automating analysis, efficient evaluation is possible with precision measurement.

Surface roughness test for tooth faces of gears



The surface roughness of gear teeth may affect strength and torque transfer efficiency. By using a stylus for gear teeth, it is possible to measure over the full face of a tooth, right down to the root. FORMTRACER Avant Series, which can cut off the positioning distance to its limit (0.05 mm) helps evaluate the surface roughness of gear teeth.

Can Pull-top groove measurement




If the pull-top groove is too shallow, the pull-top cannot be opened, and if it is too deep, it will be opened easily, resulting in leakage during transportation due to vibration or shock. The groove dimensions of products can be efficiently controlled for measured where high accuracy is required.

Surface roughness test for tablet molds



Durability is required for tablet molds to ensure the detachability of pharmaceutical powder and reduction of production cost. FORMTRACER Avant Series, which can cut off the positioning distance to its limit, helps evaluate the surface roughness of molds with accuracy and precision as it can measure products with high accuracy from edge to edge.

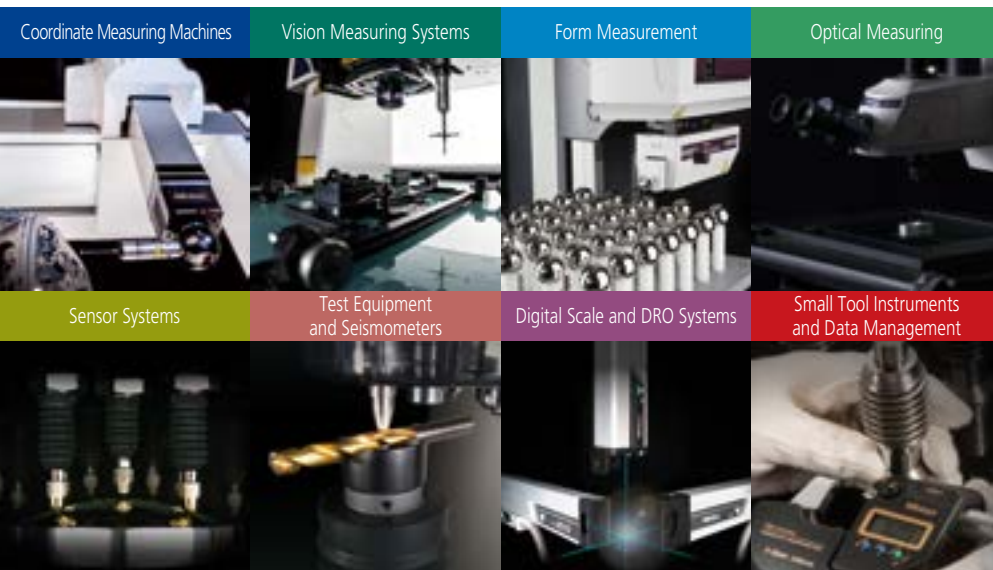

**Whatever your challenges are,
Mitutoyo supports you from start to finish.**

Mitutoyo is not only a manufacturer of top quality measuring products but one that also offers qualified support for the lifetime of the equipment, backed up by comprehensive services that ensure your staff can make the very best use of the investment.

Apart from the basics of calibration and repair, Mitutoyo offers product and metrology training, as well as IT support for the sophisticated software used in modern measuring technology. We can also design, build, test and deliver bespoke measuring solutions and even, if deemed cost-effective, take your critical measurement challenges in-house on a sub-contract basis.

Note: Product illustrations are without obligation. Product descriptions, in particular any and all technical specifications, are only binding when explicitly agreed upon.

MITUTOYO and MICAT are either registered trademarks or trademarks of Mitutoyo Corp. in Japan and/or other countries/regions.

Other product, company and brand names mentioned herein are for identification purposes only and may be the trademarks of their respective holders.

Our products are classified as regulated items under Japanese Foreign Exchange and Foreign Trade Law. Please consult us in advance if you wish to export our products to any other country. If the purchased product is exported, even though it is not a regulated item (Catch-All controls item), the customer service available for that product may be affected. If you have any questions, please consult your local Mitutoyo sales office

Mitutoyo

Mitutoyo Asia Pacific Pte. Ltd.

Company Reg No. 197800892N

24 Kallang Avenue, Mitutoyo Building, Singapore 339415

Tel: (65) 6294 2211 Fax: (65) 6299 6666

E-mail: mapsg@mitutoyo.com.sg



www.mitutoyo.com.sg | www.mitutoyo.com.my

www.mitutoyo.co.th | www.mitutoyo.co.id

www.mitutoyo.com.vn | www.mitutoyo.com.ph

Mitutoyo (Malaysia) Sdn. Bhd.

Mah Sing Integrated Industrial Park,
4, Jalan Utarid U5/14, Section U5,
40150 Shah Alam, Selangor, Malaysia
Tel: (60) 3-7845 9318
Fax: (60) 3-7845 9346

E-mail: mmsb@mitutoyo.com.my

Penang Branch

Tel: (60) 4-641 1998 Fax: (60) 4-641 2998

Johor Branch

Tel: (60) 7-352 1626 Fax: (60) 7-352 1628

Mitutoyo (Thailand) Co., Ltd.

76/3-5, Chaengwattana Road, Kwaeng
Anusaowaree, Khet Bangkaen,
Bangkok 10220, Thailand
Tel: (66) 2080 3500
Fax: (66) 2521 6136

E-mail: office@mitutoyo.co.th

Chonburi Branch

Tel: (66) 2080 3563 Fax: (66) 3834 5788

Amata Nakorn Branch

Tel: (66) 2080 3565 Fax: (66) 3846 8978

PT. Mitutoyo Indonesia

Jalan Sriwijaya No.26
Desa cibatu
Kec. Cikarang Selatan
Kab. Bekasi 17530, Indonesia
Tel: (62) 21-2962 8600
Fax: (62) 21-2962 8604

E-mail: ptmi@mitutoyo.co.id

Mitutoyo Vietnam Co., Ltd.

No. 07-TT4, My Dinh - Me Tri Urban Zone,
My Dinh 1 Ward, Nam Tu Liem District,
Hanoi, Vietnam
Tel: (84) 24-3768 8963
Fax: (84) 24-3768 8960

E-mail: mvc@mitutoyo.com.vn

Ho Chi Minh City Branch

Tel: (84) 28-3840 3489

Fax: (84) 28-3840 3498

E-mail: mvc@mitutoyo.com.vn

Mitutoyo Philippines, Inc.

Unit 2103, GMV Building 2,
107 North Main Avenue,
Laguna Technopark, Biñan,
Laguna 4024, Philippines
Tel: (63) 49-544 0272
Fax: (63) 49-544 0272

E-mail: mpi@mitutoyo.com.ph